

CONTROL CHART

REMOTE CONTROL CENTER

ALARM		◆	◆
INDICATION			◆
CONTROL	◆		◆
MEASURING			◆
ADJUSTMENT	◆		◆

Modbus

CONTROL CENTER OF THE UNIT

10 A

230V 50Hz GROUP CENTER

3x1,5

3x1,5

3x0,8

3x0,8

2x0,8

2x0,8

MODULAR CABLE
RJ12 10M

2x0,8

HS T TK RH CO2

HS	CONTROL PANEL
EC	COOKER HOOD 0-10 V
T	BOOSTING SWITCH
TK	FIREPLACE/EXTENDED TIME SWITCH
RH	HUMIDITY TRANSMITTER
CO2	CARBON DIOXIDE TRANSMITTER

COOKER HOOD EC

VENTILATION ZONE

TE1	TEMPERATURE SENSOR OUT	
TE2	TEMPERATURE SENSOR SUPPLY	
TE3	TEMPERATURE SENSOR EXTRACT	
TE4	TEMPERATURE SENSOR EXHAUST	
TF1	SUPPLY FAN	
PF2	EXTRACT FAN	
LP1	PREHEATING COIL	
LP2	POSTHEATING COIL	
TZ1	OVERHEAT PROTECTOR PREHEATING	
TZ2	OVERHEAT PROTECTOR POSTHEATING	
FG1	SUMMER BYPASS DAMPER	
RH	HUMIDITY TRANSMITTER(OPTIONAL)	

SUPPLY DEMARCATION OF THE VENTILATION UNIT

VENTILATION UNIT DIVK-C 99 CD