


CONTROL CHART

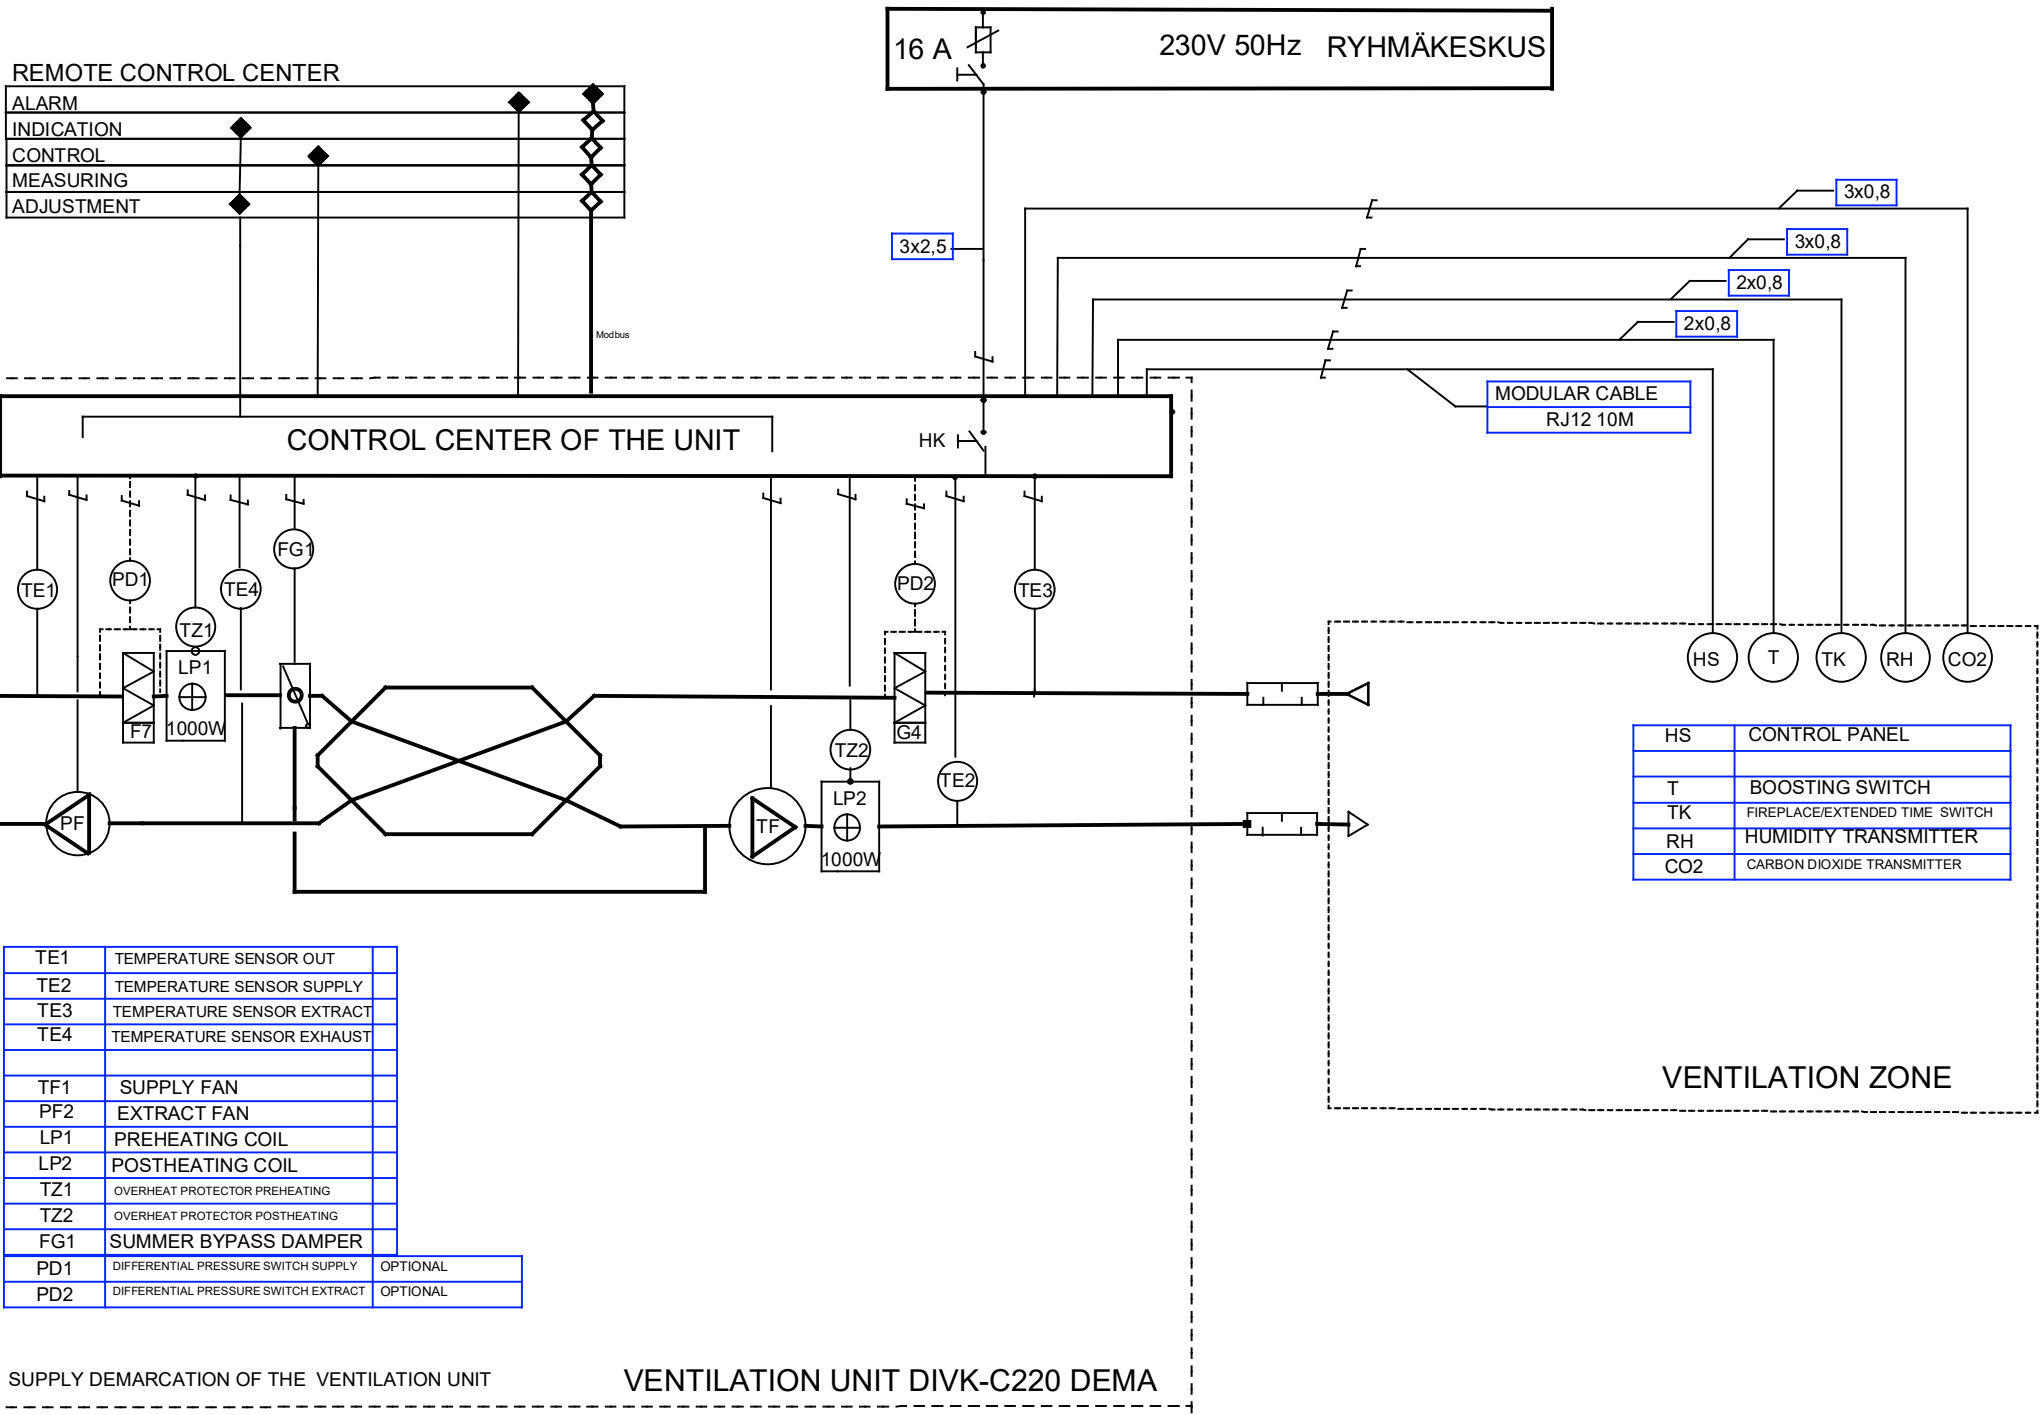

REMOTE CONTROL CENTER

ALARM	◆	◆	◆
INDICATION	◆	◆	◆
CONTROL	◆	◆	◆
MEASURING	◆	◆	◆
ADJUSTMENT	◆	◆	◆

TE1	TEMPERATURE SENSOR OUT	
TE2	TEMPERATURE SENSOR SUPPLY	
TE3	TEMPERATURE SENSOR EXTRACT	
TE4	TEMPERATURE SENSOR EXHAUST	
TF1	SUPPLY FAN	
PF2	EXTRACT FAN	
LP1	PREHEATING COIL	
LP2	POSTHEATING COIL	
TZ1	OVERHEAT PROTECTOR PREHEATING	
TZ2	OVERHEAT PROTECTOR POSTHEATING	
FG1	SUMMER BYPASS DAMPER	
PD1	DIFFERENTIAL PRESSURE SWITCH SUPPLY	OPTIONAL
PD2	DIFFERENTIAL PRESSURE SWITCH EXTRACT	OPTIONAL

HS	CONTROL PANEL
T	BOOSTING SWITCH
TK	FIREPLACE/EXTENDED TIME SWITCH
RH	HUMIDITY TRANSMITTER
CO2	CARBON DIOXIDE TRANSMITTER

SUPPLY DEMARCATION OF THE VENTILATION UNIT

VENTILATION UNIT DIVK-C220 DEMA