


CONTROL CHART

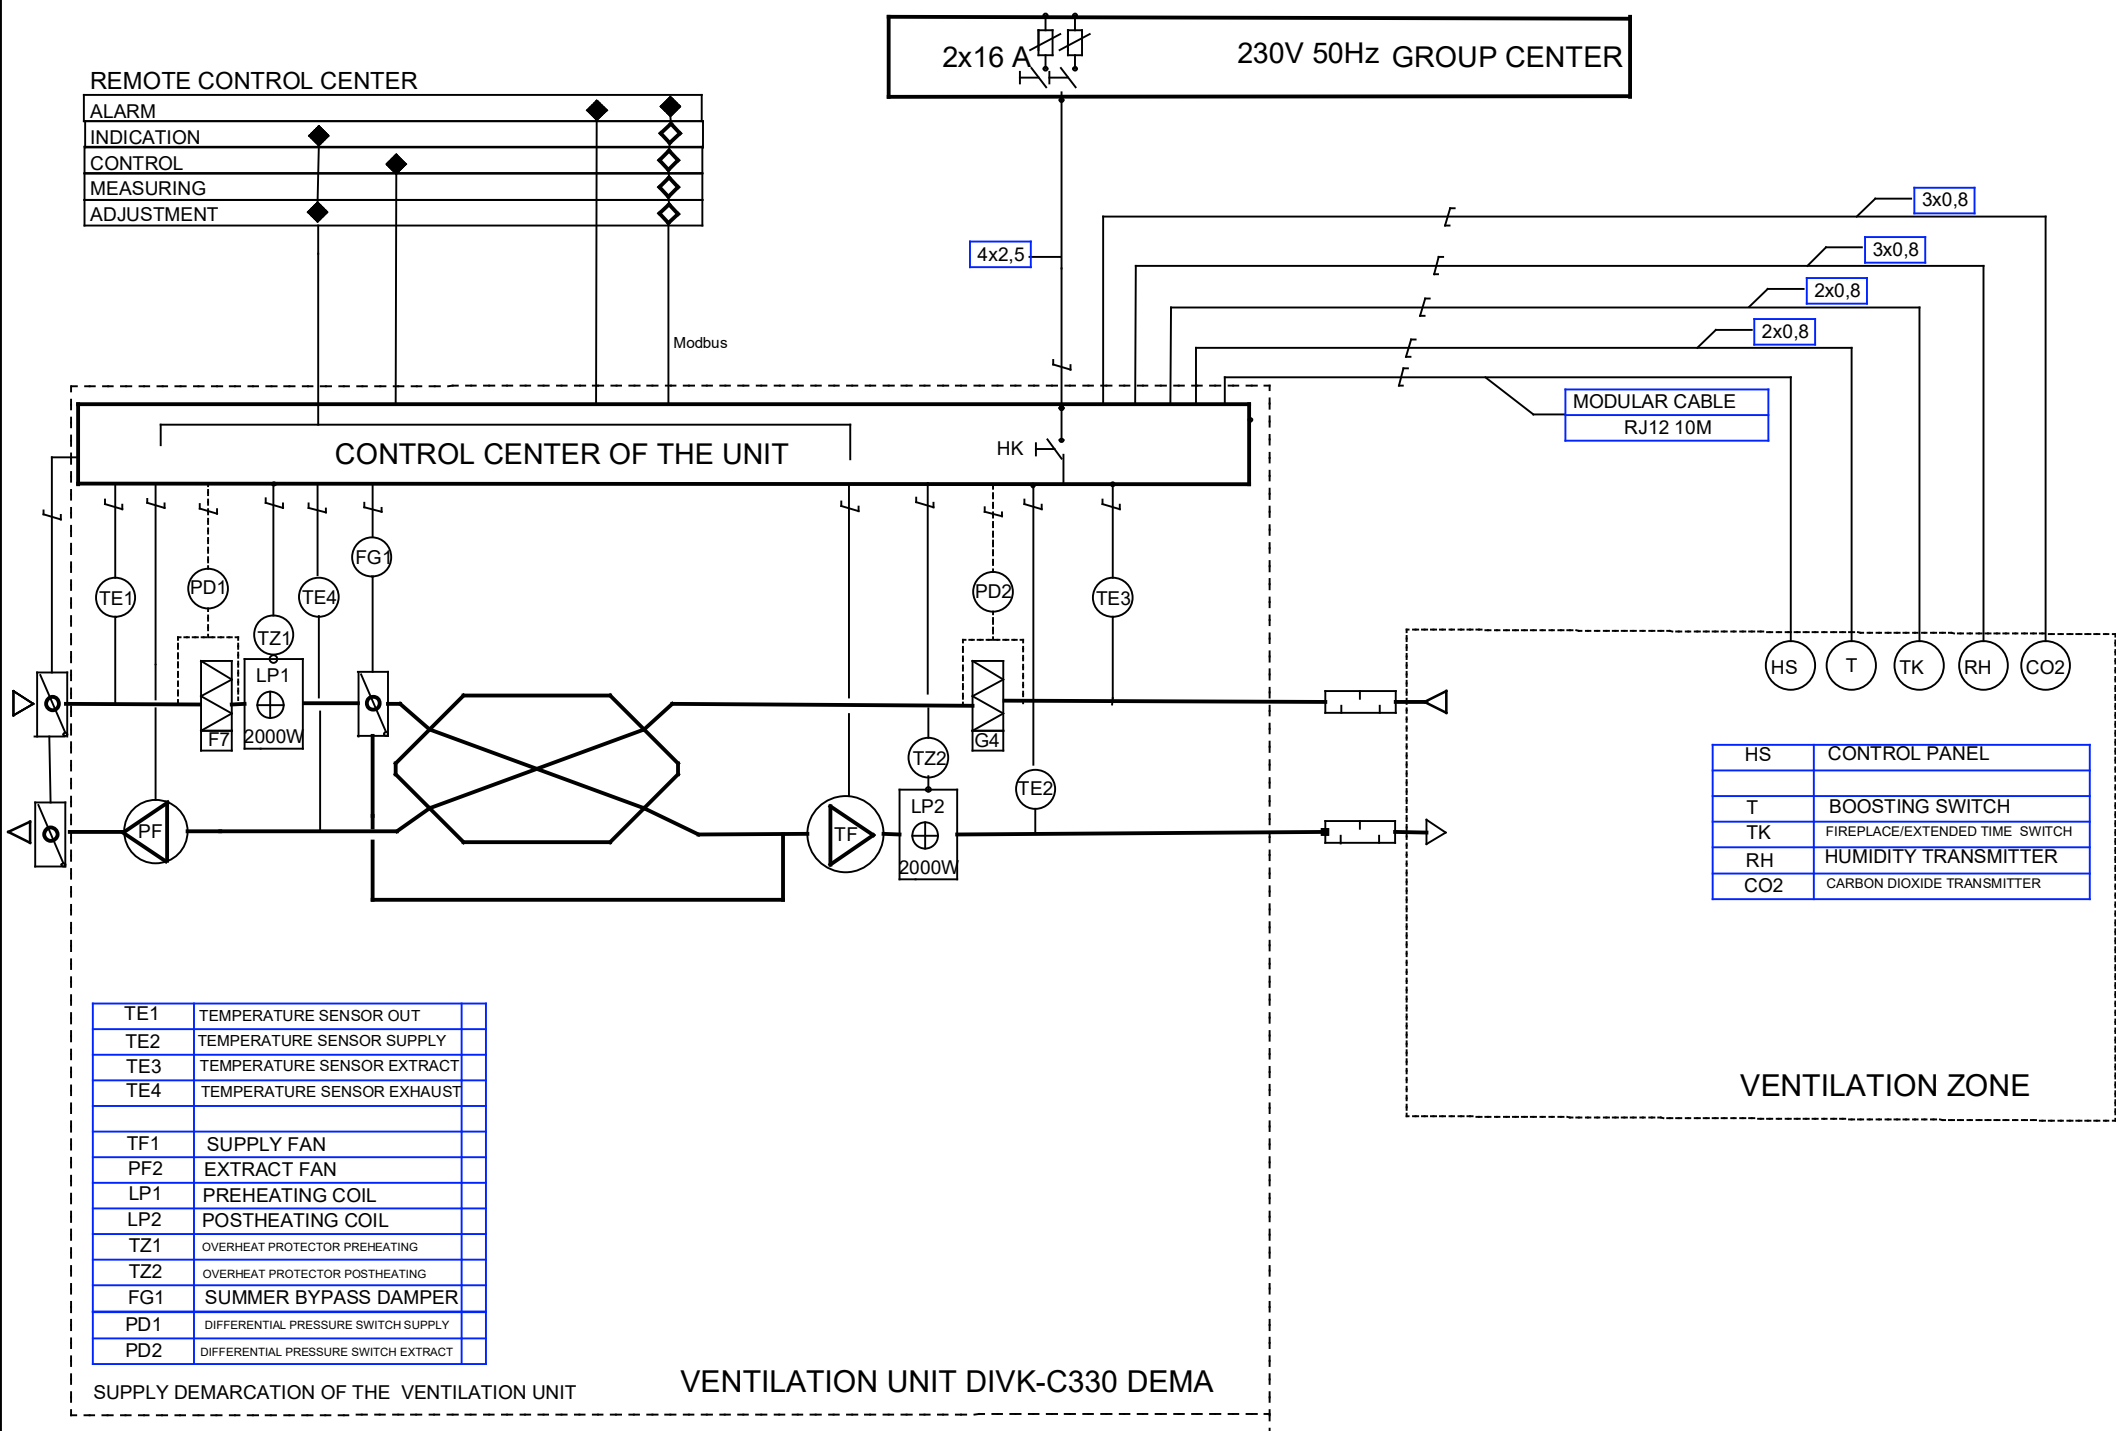

TE1	TEMPERATURE SENSOR OUT	
TE2	TEMPERATURE SENSOR SUPPLY	
TE3	TEMPERATURE SENSOR EXTRACT	
TE4	TEMPERATURE SENSOR EXHAUST	
TF1	SUPPLY FAN	
PF2	EXTRACT FAN	
LP1	PREHEATING COIL	
LP2	POSTHEATING COIL	
TZ1	OVERHEAT PROTECTOR PREHEATING	
TZ2	OVERHEAT PROTECTOR POSTHEATING	
FG1	SUMMER BYPASS DAMPER	
PD1	DIFFERENTIAL PRESSURE SWITCH SUPPLY	
PD2	DIFFERENTIAL PRESSURE SWITCH EXTRACT	